IN-CAR SENSOR


Type No 359-142-011

RACING

MEGA-Line RACING ELECTRONIC GmbH Haunersdorfer Str.3 D - 93342 Saal a.d. Donau

Germany

Phone: +49 (0) 9441 6866 - 0 Fax: +49 (0) 9441 6866 - 11 Mail: info@mega-line.com Web: www.mega-line.com

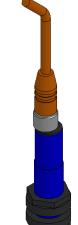

Description / features

The car sensor is an optional part of the CLS. The sensor detects the arrival of the car and also its departure. This is used specifically for data logging to monitor the quality of the tyre change but also the time to 'stop and go'.

The measurement range of the sensor is individual adjustable.

Technical specifications

General data:

Measurement range 80 ... 1600 mm

Electronic data:

Operating voltage 15 - 30 V DC
Operating current approx. 40 mA

Mechanical data:

Dimensions sensor D x L approx. \emptyset 18 x 107 mm Weight approx. 52 g Dimensions sensor with cable D x L approx. \emptyset 18 x 2097 mm Weight approx. 177 g

Connector:

Deutsch 5 pin ASL606-05PN Lenght cable 2 m

Temperature range

Ambient (min/max) -20 ... +70 °C

Ordering information:

Article no. 359-142-011 Order no. 9370



The specifications contained in this document are subject to change at any time and at the discretion of MEGA-Line and without prior warning. MEGA-Line accepts no responsibility for any claims or damage arising from the use of this document, or from the use of modules based on this document, including but not limited to claims or damage based on infringement of patents, copyrights or other intellectual property rights.

Date: 2013-02-15 Page 1

Type No 359-142-011

MEGING ELECTRONIC

MEGA-Line RACING ELECTRONIC GmbH Haunersdorfer Str.3 D - 93342 Saal a.d. Donau

Germany

Phone: +49 (0) 9441 6866 - 0 Fax: +49 (0) 9441 6866 - 11 Mail: info@mega-line.com Web: www.mega-line.com

Pin assignment

Pin	Function	Dia [AWG]	Туре
1	Vcc	22	pwr
2	GND	22	pwr
3	Signal ultrasonic	22	Signal
4	Teach-In 1	22	Signal
5	Teach-In 2	22	Signal

Modes of operation

Standard mode:

- LED sequence: Echo EC, position P1, position P2- LED EC (green): Illuminates if the echo is received


(orientation help).

- LED P1 + P2 (yellow): Illuminates each time an object is

not found between Pland P2.

- Teach-In 1 + 2: not used

- The sensor has an output signal of 4 ... 20 mA within the P1 and P2 thresholds.

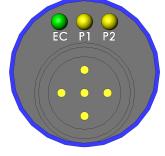


Programming mode:

1. General

- To program the sensors individually, a Y cable, with switch button as depicted in the following image is required between the sensor cable and the main wiring loom.
- The positions P1 and P2 can be programmed independently of one another.
- For the standard mode with CLS position must be 'P1 < P2'.

Teach-In y-cable

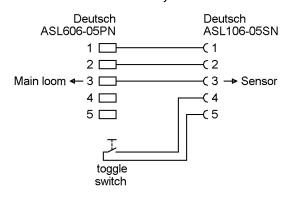

The specifications contained in this document are subject to change at any time and at the discretion of MEGA-Line and without prior warning. MEGA-Line accepts no responsibility for any claims or damage arising from the use of this document, or from the use of modules based on this document, including but not limited to claims or damage based on infringement of patents, copyrights or other intellectual property rights.

Date: 2013-02-15 Page 2

Type No 359-142-011

MEGA-Line RACING ELECTRONIC GmbH Haunersdorfer Str.3 D - 93342 Saal a.d. Donau

Phone: +49 (0) 9441 6866 - 0 Fax: +49 (0) 9441 6866 - 11 Mail: info@mega-line.com Web: www.mega-line.com

2. Teach-In position P1

- Teach-In 1 + 2 using switch button connect till LED EC and P1 flash at 2 Hz (approx. 6-8 sec), then release button. During this procedure no objects should be in the measurement field.
- LED P1 now flashes at 1 Hz and LED EC functions. Bring the reference object in close proximity to the sensor and briefly activate the switch button. The sensor now works in standard mode with newly adjusted value for position P1.


3. Teach-In Position P2

- Teach-In 1 + 2 using switch button connect till LED EC and P2 flash at 2 Hz (approx. 15-16 seconds), then release button. During this procedure no objects should be in the measurement field.
- LED P2 now flashes at 1 Hz and LED EC functions. Bring the reference object in close proximity to the sensor and briefly activate the switch button. The sensor now works in standard mode with the newly adjusted value for position P2.

4. Teach-In save

- The sensor must be powered for 30 seconds in order to save the newly programmed positions.

Mechanical dimensions

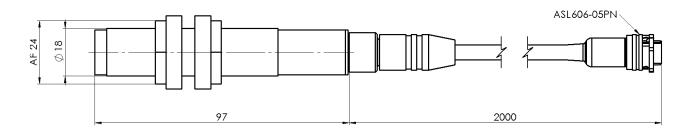

The specifications contained in this document are subject to change at any time and at the discretion of MEGA-Line and without prior warning. MEGA-Line accepts no responsibility for any claims or damage arising from the use of this document, or from the use of modules based on this document, including but not limited to claims or damage based on infringement of patents, copyrights or other intellectual property rights. Page 3